



DRILL/DRIVER

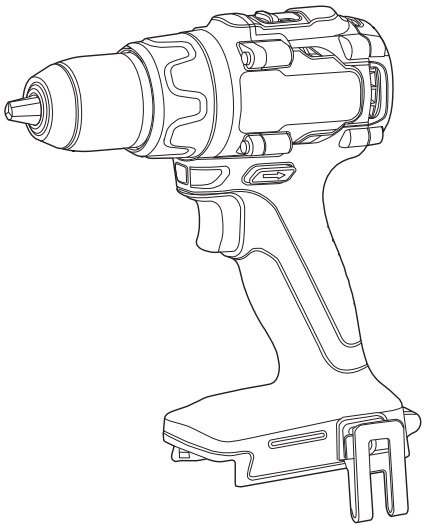

Depending on the model purchased, packaging will contain different accessories and parts. Refer to the package for more details.

KNOW YOUR PRODUCT

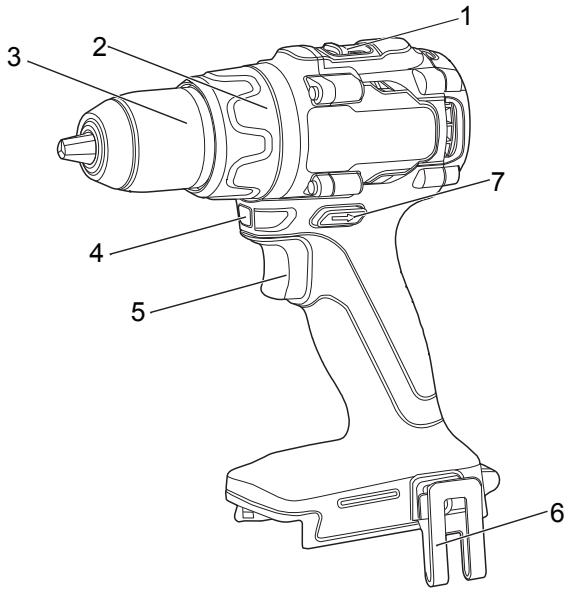

- 1

Speed Mode Selector
- 2

Clutch Ring
- 3

Chuck
- 4

LED Light
- 5

Variable Speed Trigger
- 6


Belt Clip
- 7

FWD/REV Selector


1

ASSEMBLY

**Install the belt clip**  
The belt clip may be installed on either side of the housing.

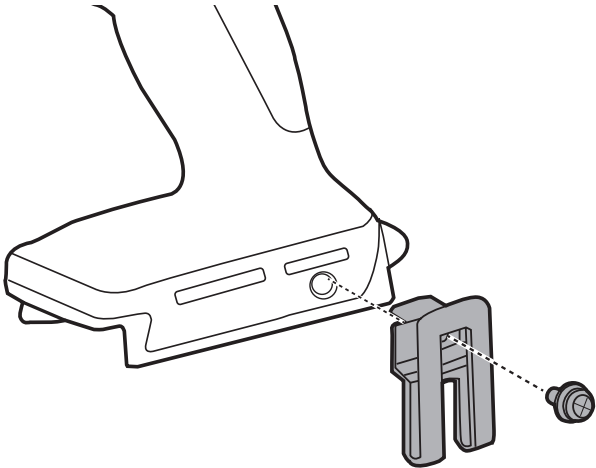

Hand tighten screw with a No. 2 philips head screwdriver.

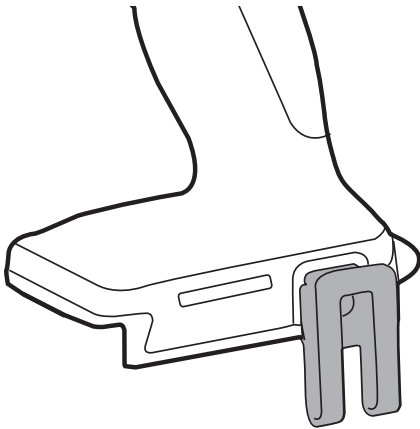

2



Europe  
[www.greenworkstools.eu](http://www.greenworkstools.eu)




USA  
[www.greenworkstools.com](http://www.greenworkstools.com)




Canada  
[www.greenworkstools.ca](http://www.greenworkstools.ca)

Install the bit

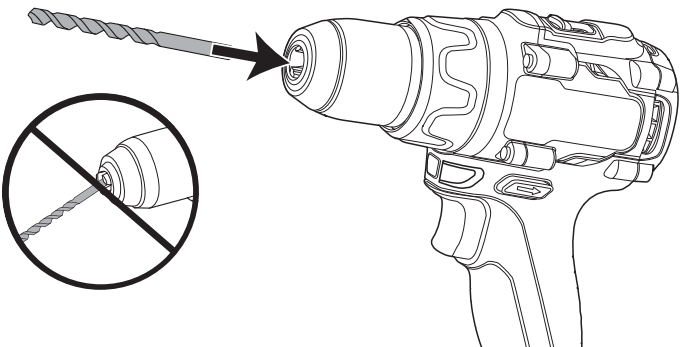


3

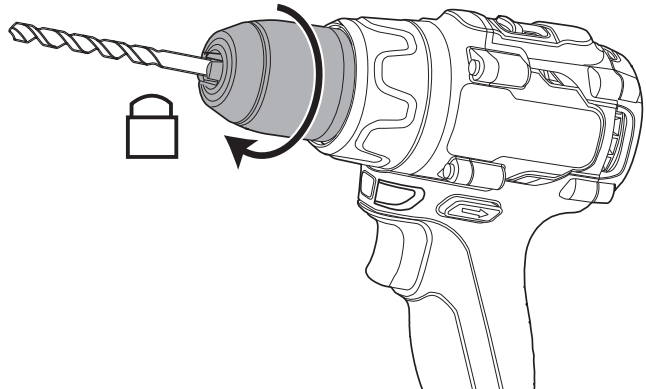

4

Change or remove the bit

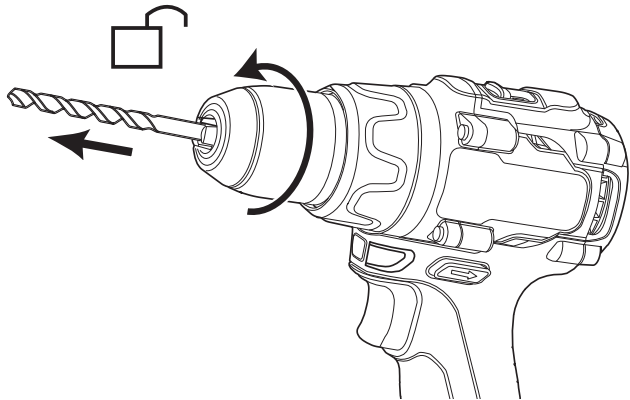


5

**OPERATION**

Connect the battery\* to the product

6

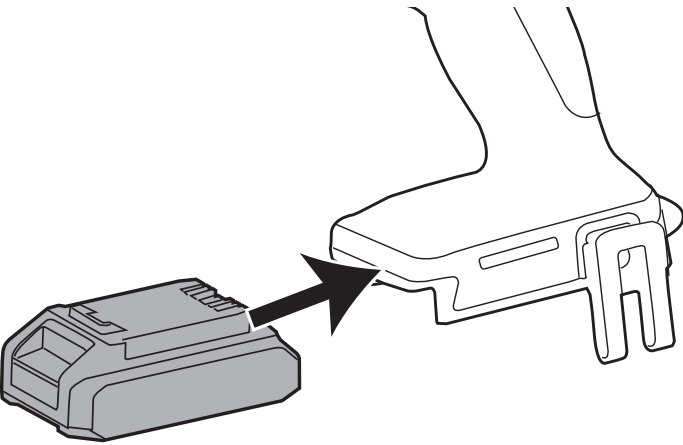


\*Compatible with all Powerall batteries.

7




Select the direction of rotation

8

9

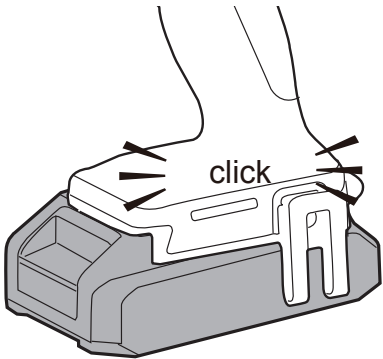

To remove the battery, press and hold the battery release button then pull it out of the product.

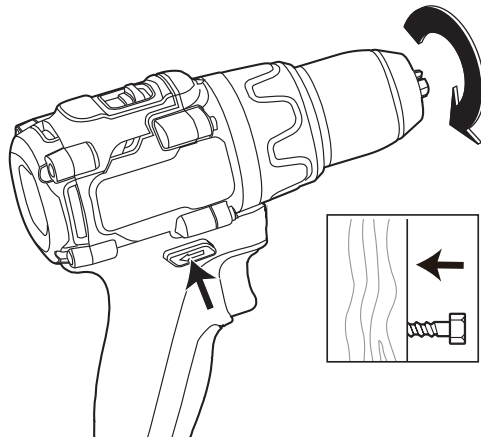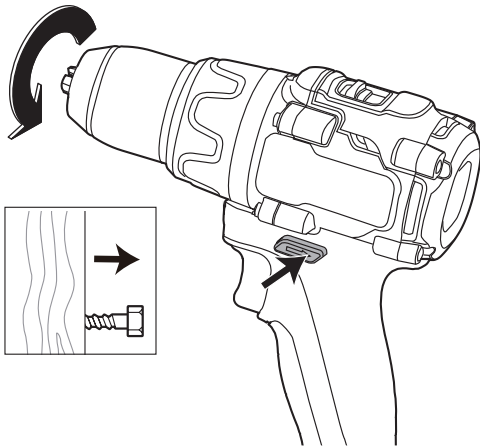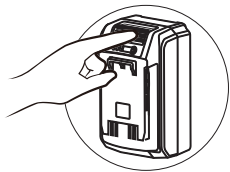

10

Adjust the torque

11

Start the product

The product cannot work until the forward/reverse switch is pushed fully to the left or right.

12

Adjust the speed

13

LED light

The LED light illuminates when the trigger is depressed.

