 


greenworks®

EN

SURFACE CLEANER

OPERATOR MANUAL

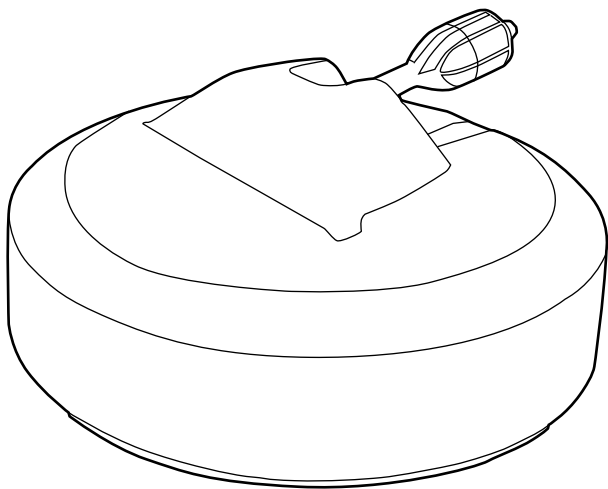

SC120

www.greenworkstools.com



1	Description.....	4	3.1	Unpack the machine.....	4
1.1	Purpose.....	4	3.2	Install the surface cleaner.....	5
1.2	Overview.....	4	4	Operation.....	5
2	General power tool		4.1	Use the spray gun.....	5
	safety warnings.....	4	4.2	Operation tip.....	5
2.1	Safety instructions.....	4	5	Maintenance.....	5
2.2	Symbols on the product.....	4	5.1	Tips for cleaning.....	5
2.3	Environmental protection.....	4	6	Technical data.....	6
3	Installation.....	4	7	Limited warranty.....	6

1 DESCRIPTION

1.1 PURPOSE

This surface cleaner can be used on various materials, including plastic, concrete, tiles, natural stone, and more.

  1.2 OVERVIEW

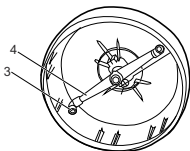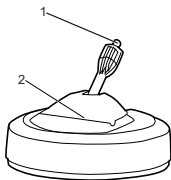

- | | |
|----------------------------|------------------------|
| 1 1/4 in. Quick Connection | 3 High Pressure Nozzle |
| 2 Casing | 4 Rotor Arm |

2 GENERAL POWER TOOL SAFETY WARNINGS

⚠ WARNING

When using this product basic precautions should always be followed, including the following:

Save all warnings and instructions for future reference.

2.1 SAFETY INSTRUCTIONS


⚠ WARNING

Please read and comply with these original operating instruction prior to the initial operation and store them for later use or subsequent owners.



- Please read the safety instructions of your pressure washer.
- Make sure there are no persons in the immediate vicinity of the cleaning head.
- Turn off the pressure washer when you finish cleaning.
- Maximum water temperature 104° F (please read the instructions of your pressure washer).

- Wear eye protection with side shields that are marked to comply with ANSI Z87.1 when operating this equipment.
- After use or before the servicing, always disconnect the surface cleaner from the pressure washer spray wand.
- Use a moist cloth and clean surface cleaner after use.

2.2 SYMBOLS ON THE PRODUCT

Symbol	Explanation
	Do not hold the edge of the surface cleaner when it is on.

2.3 ENVIRONMENTAL PROTECTION

	The packaging material can be recycled. Please do not place the packaging into the ordinary trash for disposal, but arrange for proper recycling.
	Old appliances contain valuable material that can be recycled. Please arrange for the proper recycling of appliances. Please dispose your old appliances using the appropriate collection system.

3 INSTALLATION

3.1 UNPACK THE MACHINE

⚠ WARNING

 
Make sure that you correctly assemble the machine before use.

⚠ WARNING

- If the parts are damaged, do not use the machine.
- If you do not have all the parts, do not operate the machine.
- If the parts are damaged or missing, speak to the service center.

1. Open the package.
2. Read the documentation in the box.
3. Remove all the unassembled parts from the box.
4. Remove the machine from the box.
5. Discard the box and package in compliance with local regulations.

3.2 INSTALL THE SURFACE CLEANER

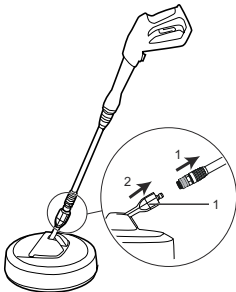

i NOTE

Fasten the surface cleaner to the high pressure 1/4 inch quick connect (1) spray wand.

 
1. Pull back the quick-connect collar.
2. Push the surface cleaner into place.
3. Push the collar forward.

4 OPERATION

⚠ WARNING

Make sure that all the connections are tight and have no leakage before operation.

4.1 USE THE SPRAY GUN

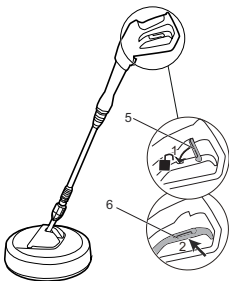

⚠ WARNING

For safe control, keep your hands on the spray gun at all times.

- Pull and hold the spray gun trigger (6) to start the machine.
- Release the spray gun trigger to stop water flow through the surface cleaner.

 
4.1.1 UNLOCK THE GUN TRIGGER

- Push the trigger safety lock-out (5) down until it clicks into the slot.

4.1.2 LOCK THE SPRAY GUN TRIGGER

- Push the trigger safety lock-out (5) up and into its original position.


4.2 OPERATION TIP

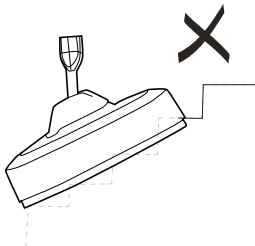

- Do not run over free standing corners. DO NOT lift or tilt the surface cleaner from a horizontal surface while connected to the spray gun during operation.

5 MAINTENANCE

 5.1 TIPS FOR CLEANING

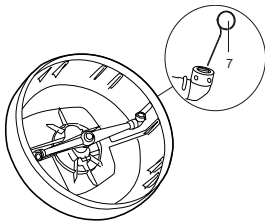

- Outdoor surfaces should be swept before the surface cleaner is used to avoid damaging the high pressure nozzles.
- The surface cleaner is not suited for scouring or scrubbing
- If striping or swirl marks occur, slow your pace. If striping or swirling continues, the surface cleaner nozzle(s) may be clogged. Disconnect surface

cleaner from pressure washer spray wand before servicing. Using a straightened paper clip or nozzle cleaning tool (not provided) (7), free any foreign materials clogging or restricting the nozzle.

6 TECHNICAL DATA

Connection	1/4 in. Quick Connect Plug Inlet
Cleaning width	12 in.
Maximum Pressure	Up to 2300 PSI
Maximum Water Flow	2.3 GPM
Maximum Water Temperature	104 °F

7 LIMITED WARRANTY

90-Day Warranty

Renewed/Refurbished products and batteries are protected against all defects in materials, parts or workmanship under normal use for a period of 90 days from the shipping date or in-store purchase date. All sales are final, no returns.

ITEMS NOT COVERED BY WARRANTY:

1. Any part that has become inoperative due to misuse, commercial use, abuse, neglect, accident, improper maintenance, or alteration; or
2. The unit, if it has not been operated and/or maintained in accordance with the owner's manual; or
3. Normal wear;
4. Routine maintenance items such as lubricants, blade sharpening;
5. Normal deterioration of the exterior finish due to use or exposure.

HELPLINE:

Warranty service is available by calling our toll-free helpline at 1-888-909-6757.

TRANSPORTATION CHARGES:

Transportation charges for the movement of any power equipment unit or attachment are the responsibility of the purchaser. It is the purchaser's responsibility to pay transportation charges for any part submitted for replacement under this warranty unless such return is requested in writing by Greenworks.

USA address:

Greenworks Tools

P.O. Box 1238

Mooresville, NC 28115

Canadian address:

Greenworks Tools Canada, Inc.

P.O. Box 93095, Newmarket, Ontario

L3Y 8K3

greenworks®

www.greenworkstools.com



P0802848-01