


Surface Cleaner
Model #: 30012

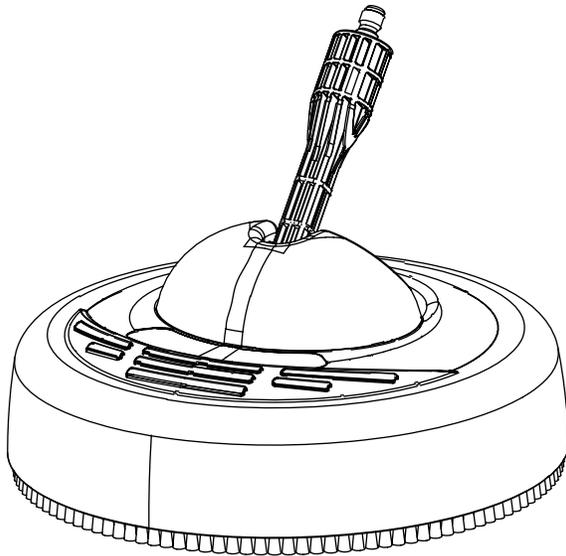

OPERATOR'S MANUAL

TOLL-FREE HELPLINE: 1-888-90WORKS (888.909.6757)



WARNING: It essential you read and understand the instructions in this manual before you operate this machine.

Safety Instruction



WARNING:

Please read and comply with these original operating instruction prior to the initial operation and store them for later use or subsequent owners.

- Please observe the safety instruction of your high pressure cleaner.
- There must be no persons in the immediate vicinity of the cleaning head.
- Be aware of the recoil force! Ensure a stable position and firmly hold the high pressure gun with the extension tube or the handle.
- Switch off the high pressure cleaner when you finish cleaning.
- Maximum water temperature 104 °F (Please observe the instructions of your high-pressure cleaner).
- Always wear eye protection with side shields marked to comply with ANSI Z87.1.
- After use or before servicing, always disconnect the surface cleaner from the pressure washer spray wand.

Symbol



WARNING:

Don't hold and the edge of the surface cleaner when it is on.

Description of the Appliance

When unpacking the products, make sure no accessories are missing and none of the package contents have been damaged. If you detect any damages do not use this accessory, contact Greenworks customer service at 1-888-90WORKS (888.909.6757).

Connections: 1/4". Quick Connect Plug

Deck Width: 11".

Maximum Pressure: up to 2000 psi

Maximum Water Flow: 1.4 gpm

Maximum Water Temperature: 104 °F

→ See Fig 1

1. 1/4" quick connection
2. Casing
3. High pressure nozzle
4. Rotor arm

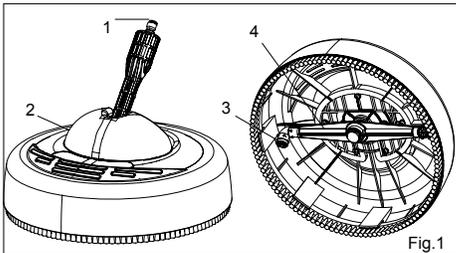


Fig. 1

Proper Use

The surface cleaner is ideally suited for the cleaning floor made of different materials, such as plastic, concrete, tiles, natural stone. Use the surface cleaner exclusively in your private household.

Application

Cleaning Floor Surface

Fasten the surface cleaner to the high pressure 1/4 inch quick connect spray wand.

→ See Fig.2

1. Pull back the quick-connect collar
2. Push the surface cleaner into place
3. Push the collar forward.
4. Pull the trigger gun to operate the machine

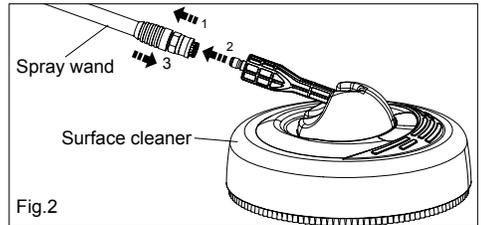


Fig.2

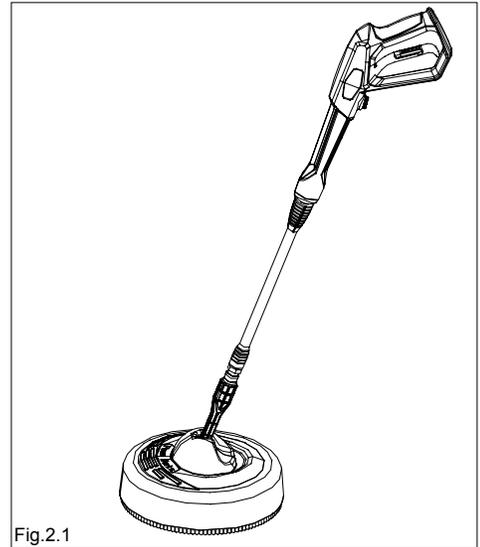


Fig.2.1

Tips for cleaning

- Outdoor surfaces should be swept before the surface cleaner is used to avoid damaging the high pressure nozzles.
- The surface cleaner is not suited for scouring or scrubbing.
- If striping or swirl marks occurs slow your pace. If striping or swirling continues, the surface cleaner nozzle(s) may be clogged. Disconnect surface cleaner from pressure washer spray wand before servicing. Using a straightened paper clip or nozzle cleaning tool (not provided), free any foreign materials clogging or restricting the nozzle.(See Fig.3)

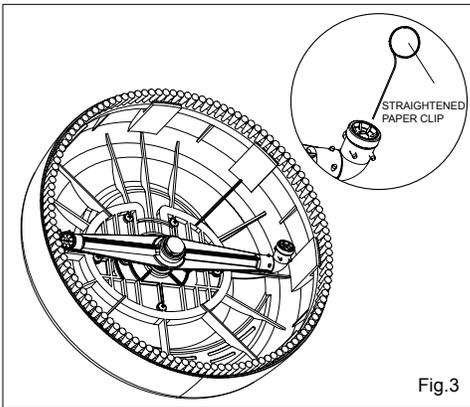


Fig.3

Caution



WARNING

→ See Fig.4

Do not run over free standing corners. DO NOT lift or tilt the surface cleaner from a horizontal surface while connected to the spray gun during operation.

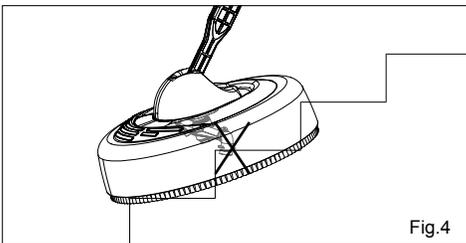


Fig.4

General information

Environmental protection



The packaging material can be recycled. Please don't place the packaging into the ordinary refuse for disposal, but arrange for the proper recycling.



Old appliances contain valuable material that can be recycled. Please arrange for the proper recycling of old appliances. Please dispose your old appliances using appropriate collection system.

Care

Use a moist cloth and clean the appliance after use.

WARRANTY



GREENWORKS™ hereby warrants this product, to the original purchaser with proof of purchase, for a period of one (1) years against defects in materials, parts or workmanship.

GREENWORKS™, at its own discretion will repair or replace any and all parts found to be defective, through normal use, free of charge to the customer. This warranty is valid only for units which have been used for personal use that have not been hired or rented for industrial/ commercial use, and that have been maintained in accordance with the instructions in the owners' manual supplied with the product from new.

ITEMS NOT COVERED BY WARRANTY:

1. Any part that has become inoperative due to misuse, commercial use, abuse, neglect, accident, improper maintenance, or alteration; or
2. The unit, if it has not been operated and/or maintained in accordance with the owner's manual; or
3. Normal wear, except as noted below;
4. Routine maintenance items such as draining the water to avoid freezing/ice damage to pump and components.
5. Normal deterioration of the exterior finish due to use or exposure.

GREENWORKS HELPLINE (1-888-90WORKS):

Warranty service is available by calling our toll-free helpline, 9am to 5pm EST. at 1-888-909-6757 (1-888-90WORKS).

TRANSPORTATION CHARGES:

Transportation charges for the movement of any power equipment unit or attachment are the responsibility of the purchaser. It is the purchaser's responsibility to pay transportation charges for any part submitted for replacement under this warranty unless such return is requested in writing by GREENWORKS.

